

# Instruction Manual

## LCD display:

Month, Date, Day of the week, Temperature

(where Year, Hour, Minute, second, will only be displayed during setting)

## Key Instruction

1. SET : to set the time and calendar
2. UP : used as number Up-adjustment during setting
3. DOWN : transfer between Celsius and Fahrenheit temperature format. Used as number Down-adjustment during setting.
4. RESET : return to original factory setting

## Setting Instruction

Please install the battery before usage and the clock will display in normal mode. (Please press RESET key if the clock didn't display normally)

1. Time and Date setting

Press SET key for 2 seconds to enter into setting mode. The setting digits will flash. Complete the following settings in sequence by using UP or DOWN key:

Year→Month→Date→Hour→Minute→Second→Return

2. If no key was pressed in 60 seconds the screen would return to normal display.

## Power

This clock uses 1xAA battery (DC1.5V)

Please replace new batteries when the display became unclear.

