


File Name	KE9700
Size	315 x 145 mm
Version Date	Designer Jennifer
1.) 11 JuL., 2016	Colors K 白底黑字
2.) 12 JuL., 2016	
3.)	
4.)	
5.)	
diecutline ——— foldline - - -	

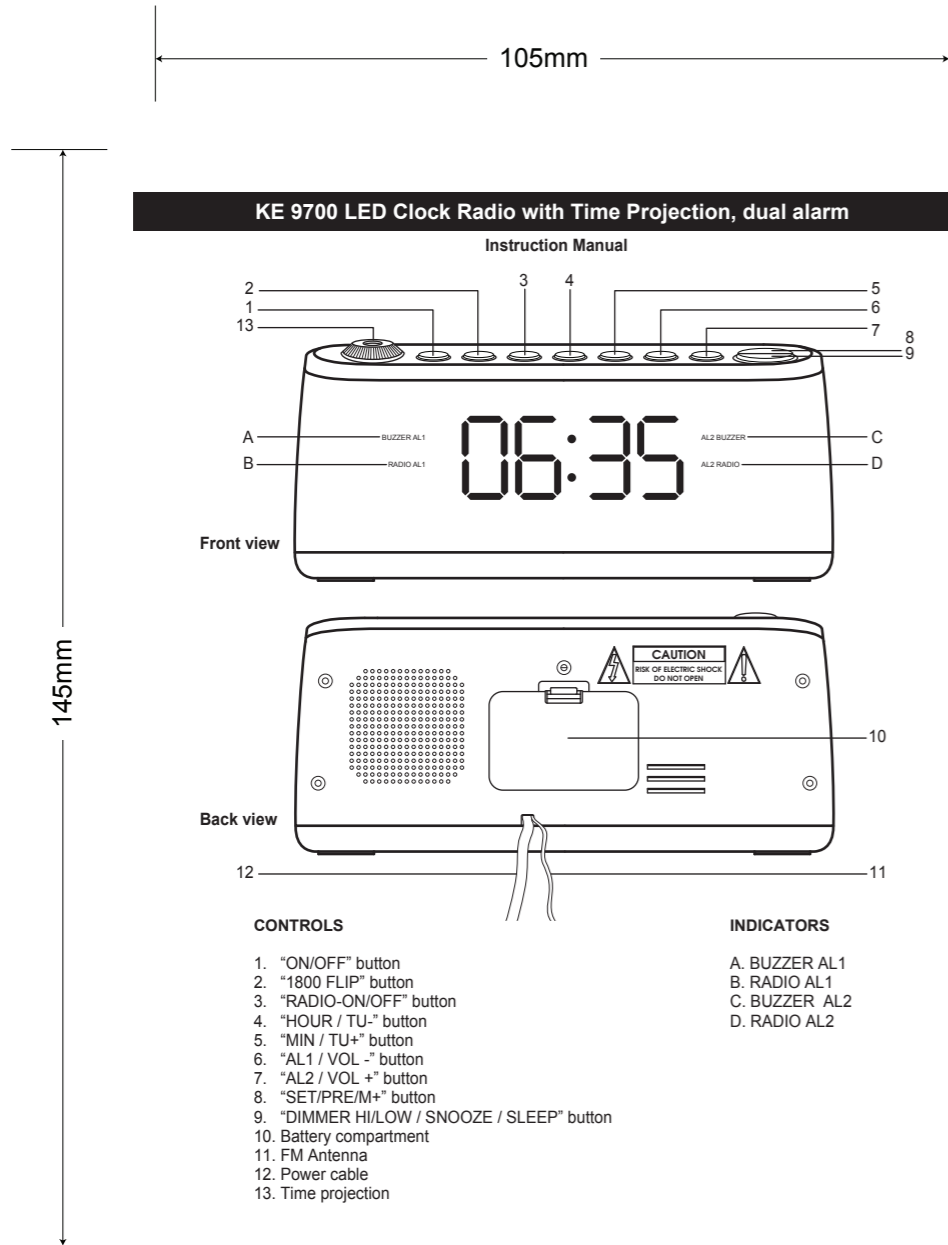

PREPARATION FOR USE

This clock radio is AC powered. Use two 'AAA' size batteries to keep accurate time during temporary power interruption. Insert batteries by matching the polarity (+/-) markings in the battery compartment (10). Please replace all batteries at the same time with only new batteries. Remove all batteries when the clock radio is not in use for extended periods of time.

The clock radio has slip proof silicon feet. Place the clock radio only on protected furniture. Avoid direct sunlight and any area that is exposed to water or moisture.

Plug power cable (12) into electrical outlet with correct voltage. Check rating labels on the radio. **DO NOT PLUG THE RADIO INTO AN ELECTRICAL OUTLET IF YOU ARE UNSURE OF THE VOLTAGE.**

Unwind the FM antenna (11) on the back of the clock radio. Extend and reposition the antenna for best radio reception.

CLOCK and ALARM CLOCK OPERATION

Note: The time and alarm times can only be set when the radio is turned off.

SETTING THE TIME AND DAY

- The digits will flash after connecting power to the radio, or press and hold down "SET/PRE/M+" button (8) for approximately 3 seconds until the display flashes.
- Press "HOUR / TU-" button (4) repeatedly to change the hour setting.
- Press "MIN / TU+" button (5) repeatedly to change the minute setting.
- Press "SET/PRE/M+" button (8) to confirm the time and to set the day
- Press "HOUR / TU-" button (4) or "MIN / TU+" button (5) to set the day of the week.

d-01	Monday
d-02	Tuesday
d-03	Wednesday
d-04	Thursday
d-05	Friday
d-06	Saturday
d-07	Sunday

- Press "SET/PRE/M+" button (8) to confirm.

SETTING THE ALARM TIME

This clock radio has dual alarms that can be set and used independently. Alarm 1 (AL1) is a 5-day weekday alarm. Alarm will only sound on Monday to Friday (inclusive). Alarm 2 (AL2) is a 7-day alarm. Alarm 2 will sound every day of the week.

The procedure to set both alarms are the same. Both alarms can either sound the buzzer or wake up to radio. Follow the instructions below to set alarm time 1. For alarm time 2, substitute "AL1 / VOL -" button (6) with "AL2 / VOL +" button (7).

- Press and hold down "AL1 / VOL -" button (6) for approximately 3 seconds to set alarm time 1.
- When the digits are flashing, press "HOUR / TU-" button (4) repeatedly to change the hour setting. Press "MIN / TU+" button (5) repeatedly to change the minute setting.
- Press "AL1 / VOL -" button (6) to confirm.

ACTIVATING THE ALARM

- Press "AL1 / VOL -" button (6) once to sound buzzer. Indicator "A" will be on.
- Press "AL1 / VOL -" button (6) again to sound radio. Indicator "B" will be on. Press "AL1 / VOL -" button (6) again to de-activate alarms.
- When the alarm sounds, press "RADIO ON/OFF" button (3) to turn off alarm or press "DIMMER HI/LOW / SNOOZE / SLEEP" button (7) to enter snooze mode. Alarm indicators will blink during snooze mode. Alarm will sound again after 10 minutes.

Note: You must make the time and alarm time adjustments while the display is flashing. The display will stop flashing after approximately 3-4 seconds if adjustments are not made.

DISPLAY BRIGHTNESS

When the radio is off and the current time showing, press "DIMMER HI/LOW / SNOOZE / SLEEP" button (9) to change the brightness of the display between high, medium, and low.

TIME PROJECTION

Press "ON/OFF" button (1) to turn time projection on and off. It is most visible on a flat white surface. Press "1800 FLIP" button (2) to rotate time projection by 180°. Tilt time projection(13) as desired.

RADIO OPERATIONS

General Operations

- Press "RADIO-ON/OFF" button (3) to turn the FM radio on and off. The radio station frequency will appear on the display.
- When time is showing, press "HOUR / TU-" button (4) or "MIN / TU+" button (5) to view current radio station.
- When the radio frequency is showing, press "HOUR / TU-" button (4) or "MIN / TU+" button (5) to change radio frequency. Or, press and hold down "HOUR / TU-" button (4) or "MIN / TU+" button (5) for approximately 3 seconds to auto scan for the next available station.
- Press "AL1 / VOL -" button (6) or "AL2 / VOL +" button (7) until to adjust volume level. The display changes to show the volume level indication (00 to 15). 00 is the quietest and 15 is the loudest.

Pre-set Station Memory

- The radio can store up to 10 FM stations.
- To store a station in memory, tune to the desired radio station. Press and hold down "SET/PRE/M+" button (8) for approximately 2 seconds and a number starting with "P" on the display will flash. This "P" number represent one of the 10 memory stations. Press "HOUR / TU-" button (4) or "MIN / TU+" button (5) to change the station number. Press "SET/PRE/M+" button (8) to confirm.
- To recall a pre-set station, turn the radio on. Press "SET/PRE/M+" button (8) repeatedly until station number is found. The station frequency will be display momentarily.

Sleep mode

- When the radio is on, press "DIMMER HI/LOW / SNOOZE / SLEEP" button (9) to enter sleep mode. "90" will be displayed. Radio will turn off in 90 minutes. Press "DIMMER HI/LOW / SNOOZE / SLEEP" button (9) again to select sleep time in 10 minutes interval (90 minutes to OFF minutes).

